


When rear window defrost switch (B9) is closed, it sends power to Defrost relay (I2) for the rear window. Power also goes to mirror defrost relay (I45) under back seat which in turn activates the other (I45) relay in the Fuse box which activates heaters located in the mirrors.

Also see Diagram on Page 40-54

**ELECTRIC ACCESSORIES**  
HORNS, HEATED REAR WINDOW AND CLOCK (wiring diagram)

other I45 is in Fuse box  
This I45 is under Back seat

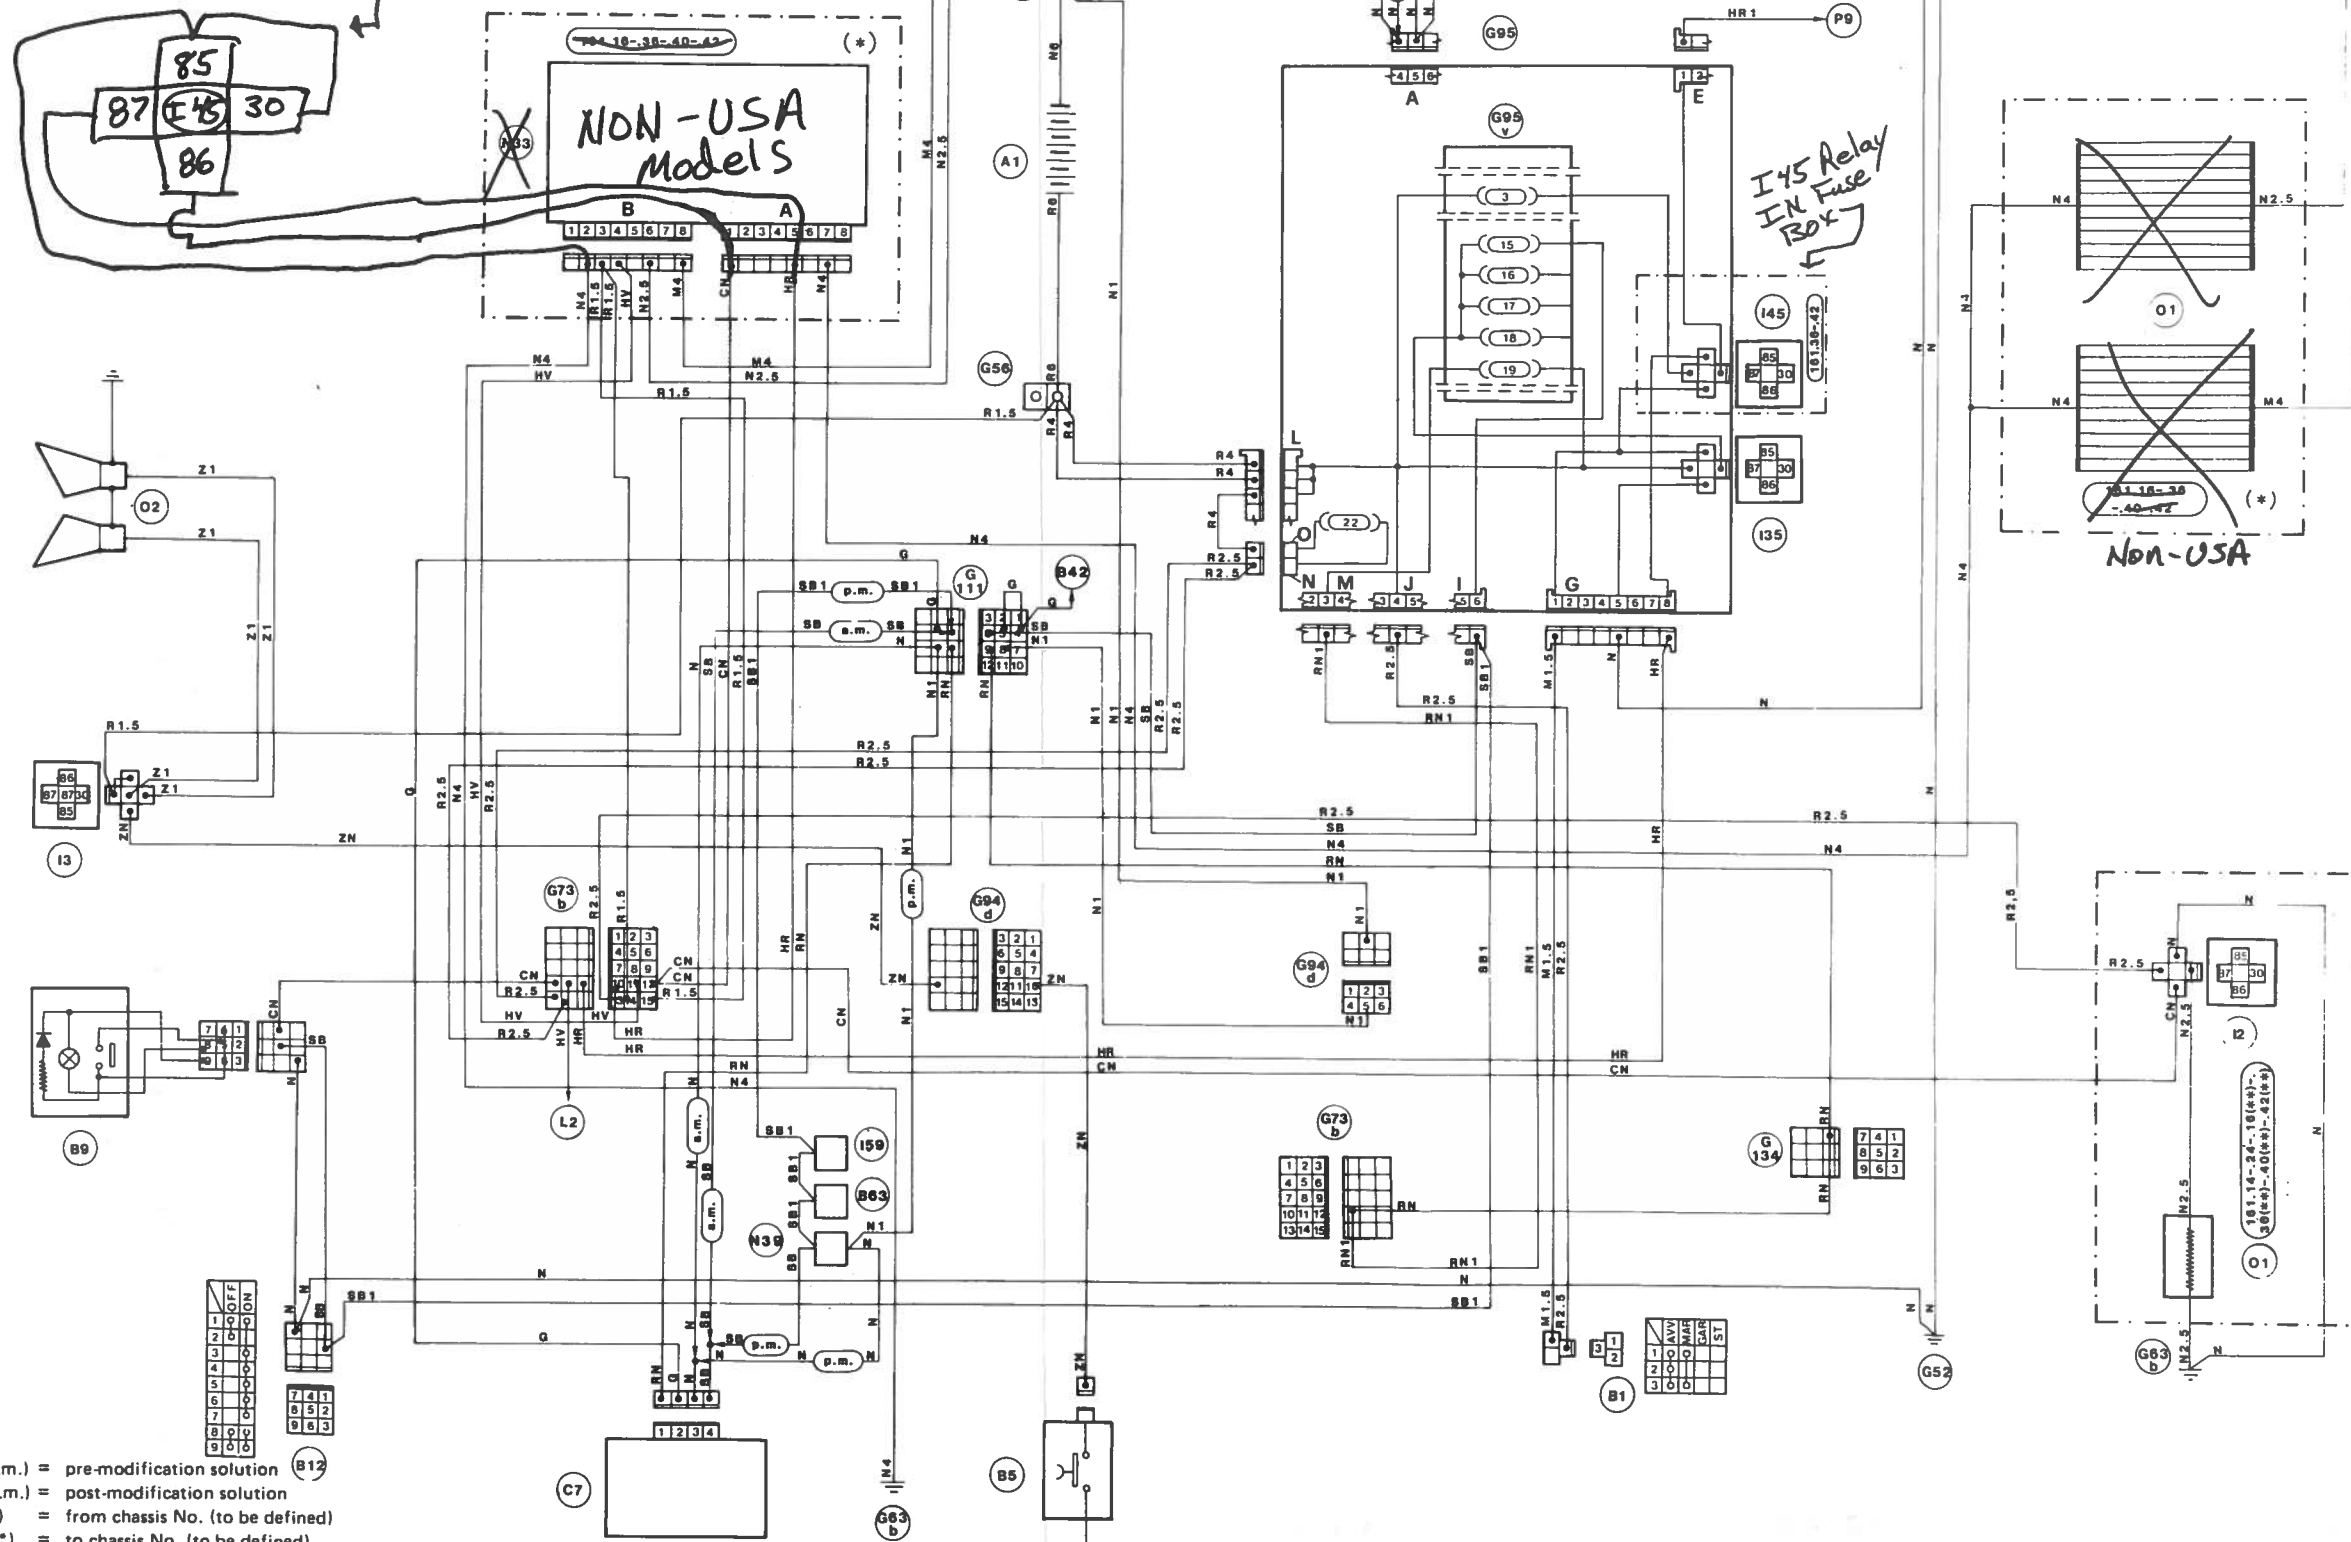

(b.m.) = pre-modification solution  
(p.m.) = post-modification solution  
(\*) = from chassis No. (to be defined)  
(\*\*) = to chassis No. (to be defined)