


CAR RADIO, CIGAR LIGHTER AND HEADPHONE SOCKETS  
(wiring diagram)

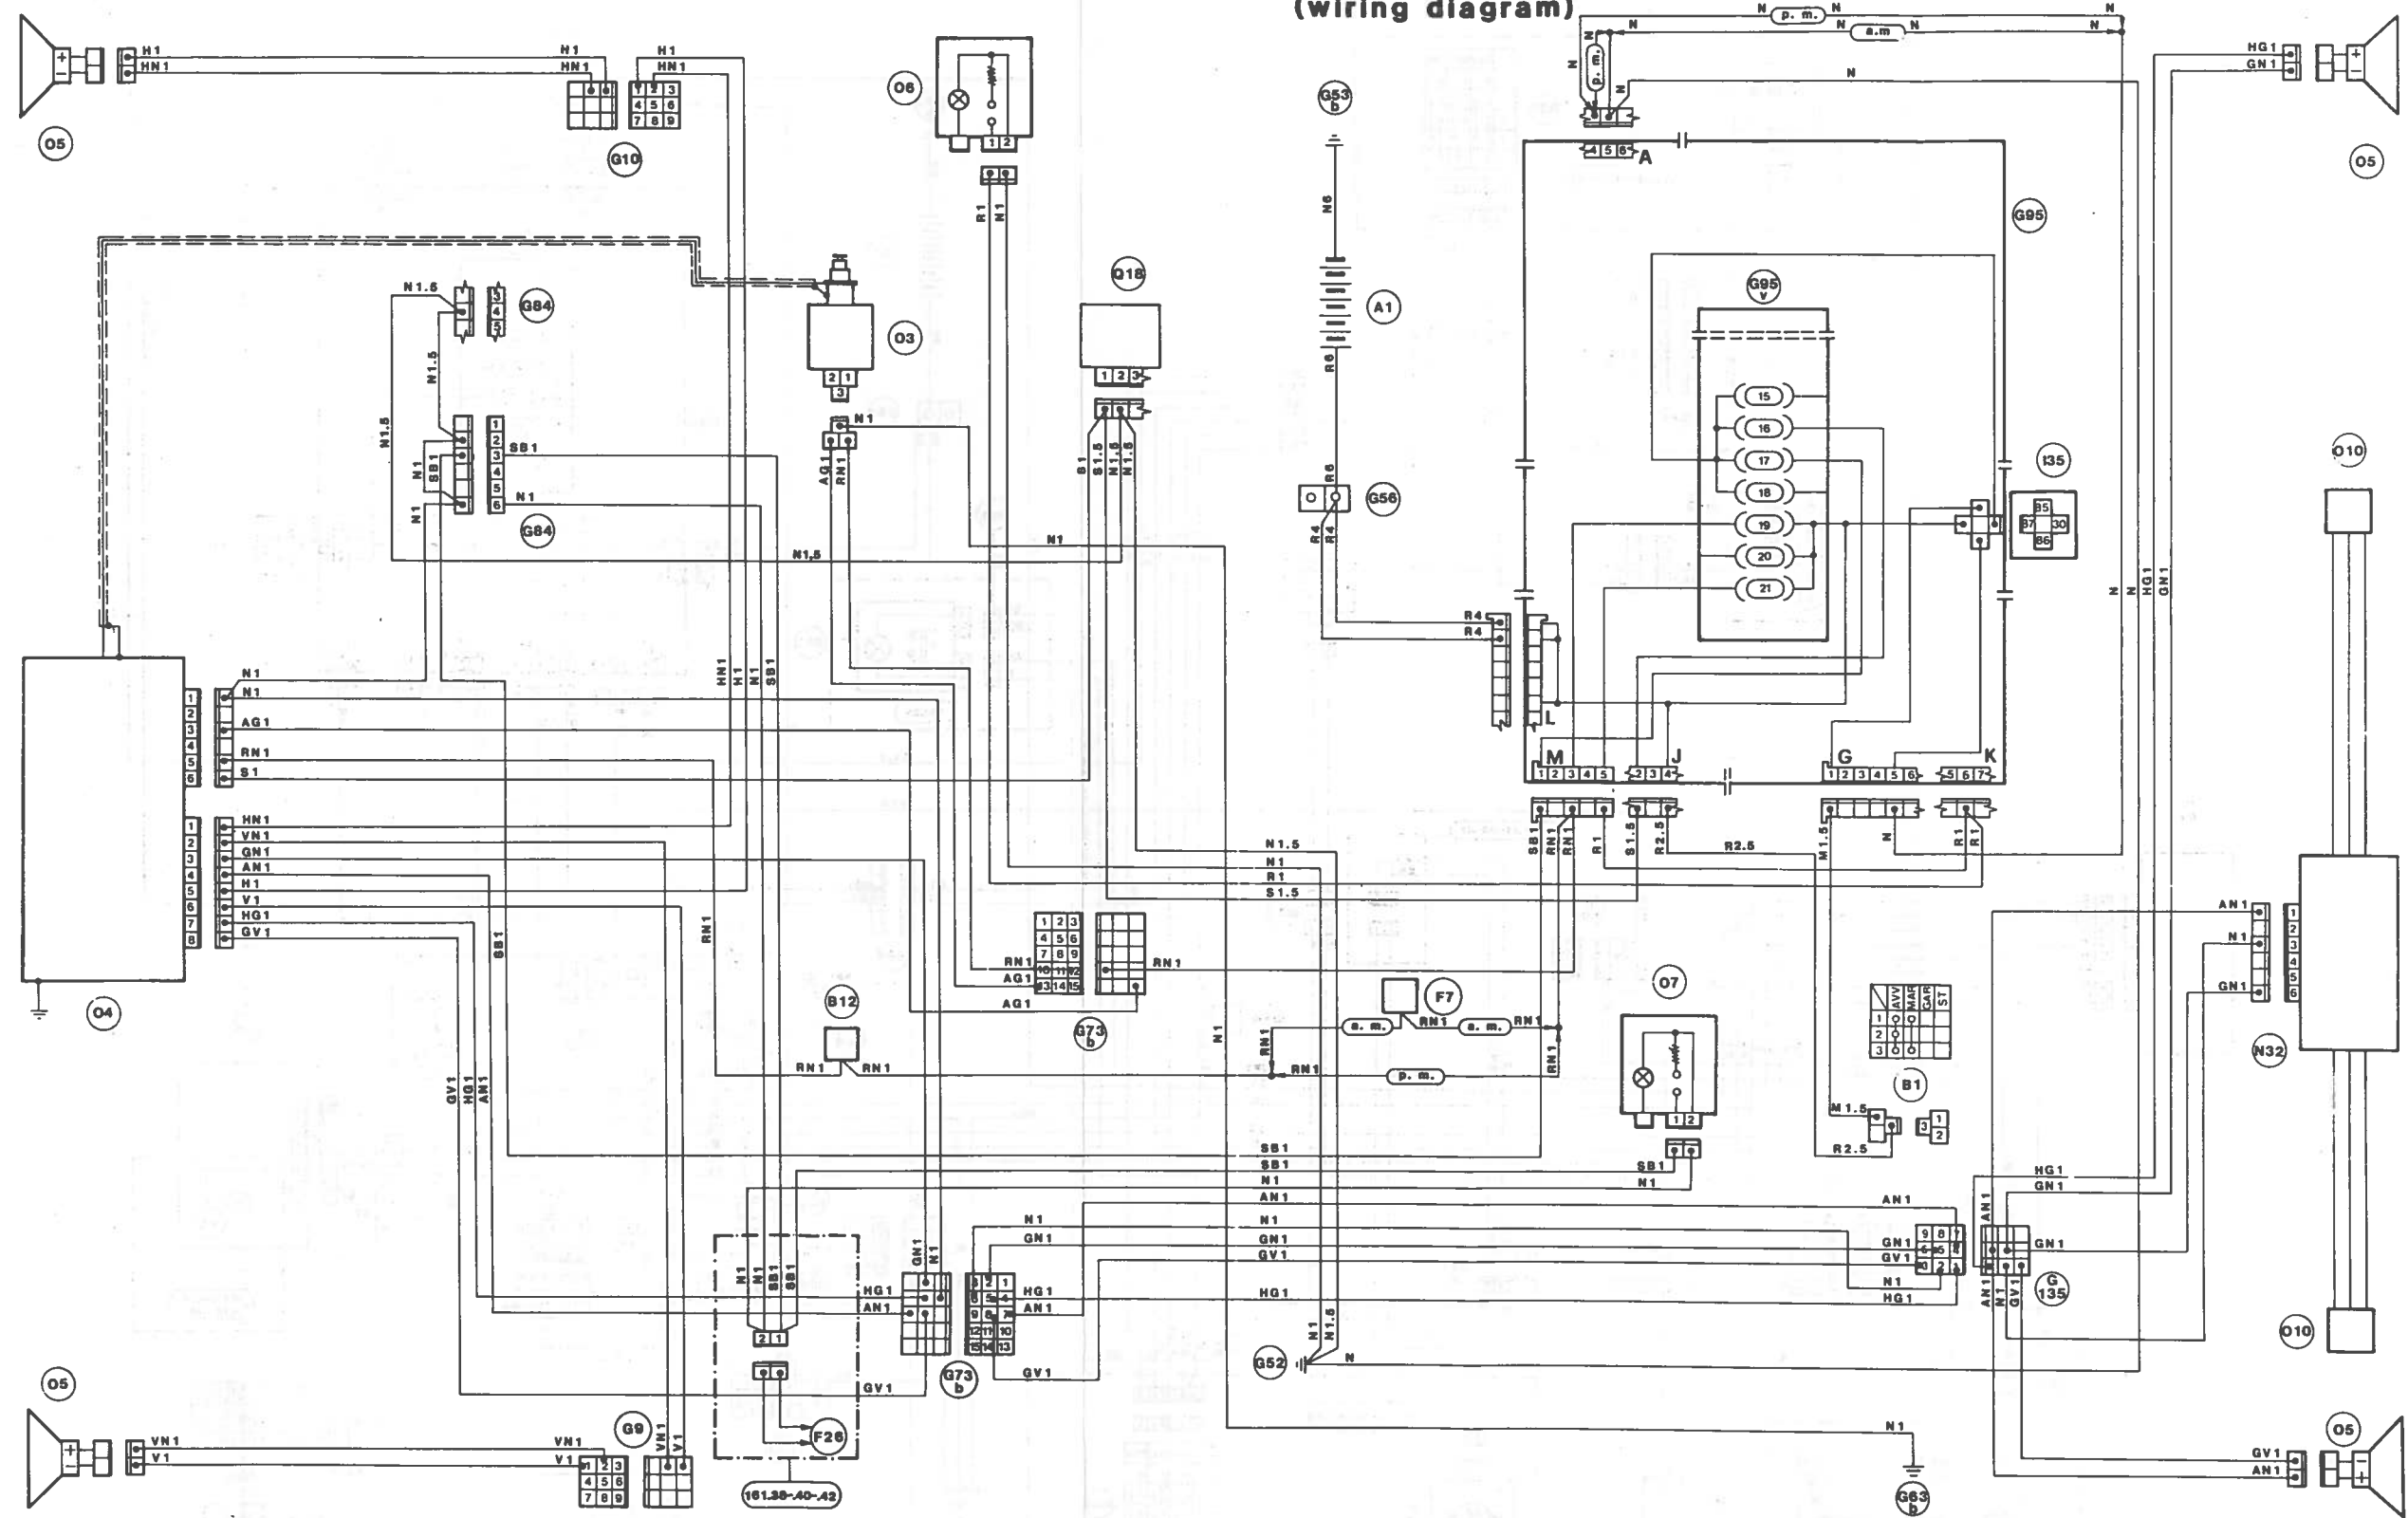

(a.m.) = pre-modification solution  
(p.m.) = post-modification solution